

INSTRUCTION MANUAL

EN



Filter Holder 6x12-L

by
Auloma Holding S.r.l.

IT
EN
ES
FR

Thank you for purchasing the Filter Holder 6x12-L. Please read this instruction manual carefully before operating

Working theory

Filter holders Aulomacolor-L are developed to be installed on our medium format camera Panorama 6x12 and to install our photographic filters Aulomacolor-L-BW or whichever photographic filter wide 100mm and thick 3mm.

Thanks to its design will be possible install until three filters together and placing them without impediment until all pinholes wont be covered. Through this system will be possible obtain different filters color combinations and add ND filters, to execute colors or black and white photos.

The main feature of this film holder can be assumed in the elastic guides special design. In our filter holder, side guides have the function of align and lead the filters during the insertion, in addition provide an elastic stop that lock the filters as soon as you stop the insertion. Through this system the filter insertion results faster, will be enough get the filter from the borders and sliding it into the filter holder., this system preventing accidental contact of your fingers on the filter surface and block in safety the inserted filters.

Caution - Safety precautions


1. Children from 0 to 14 years of age are not allowed to use the filter holder. The filter holder is composed by detachable components that could be ingested.
2. Keep the filter holder away from heat sources $>90^{\circ}\text{C}$, to avoid irreparable damage
3. Keep the filter holder away from fire to avoid damage or burning.

Note

- Do not use acids, corrosive substances, hydrocarbons or anything else not indicated for cleaning surfaces.
- The filter holder is a handcrafted product with surfaces finished by abrasive discs. Possible scratches due to processing are a characteristic of our product and can't to be considered defects or that the product has been used.


Installation on Camera

The installation or removal of Aulomacolor filters is done by two simple operations. The first operation consists in mounting the Aulomacolor filter holder on the pinhole camera using threaded knobs 1.

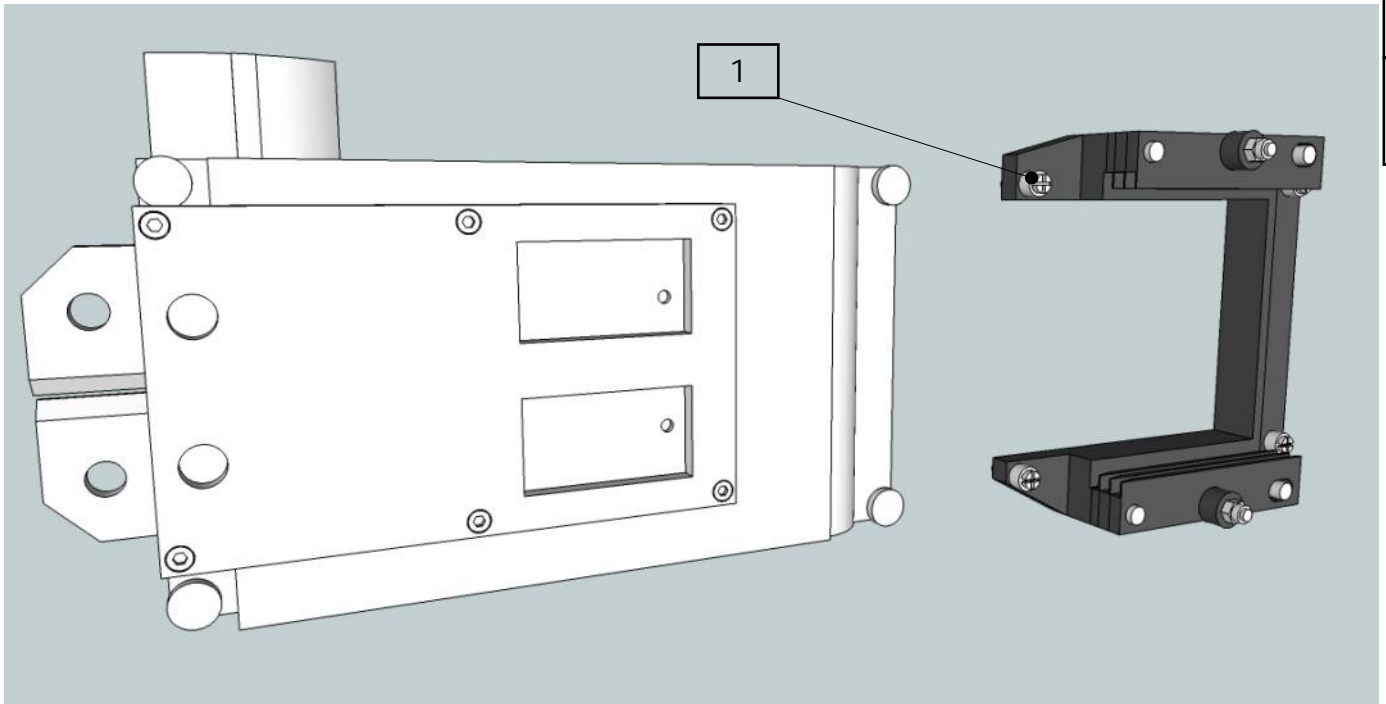

Caution:


Before install the filter remove the safety treaded knobs 2 that block each shutter, this because the head of the knob allow the filter insertion only from its opposite side.

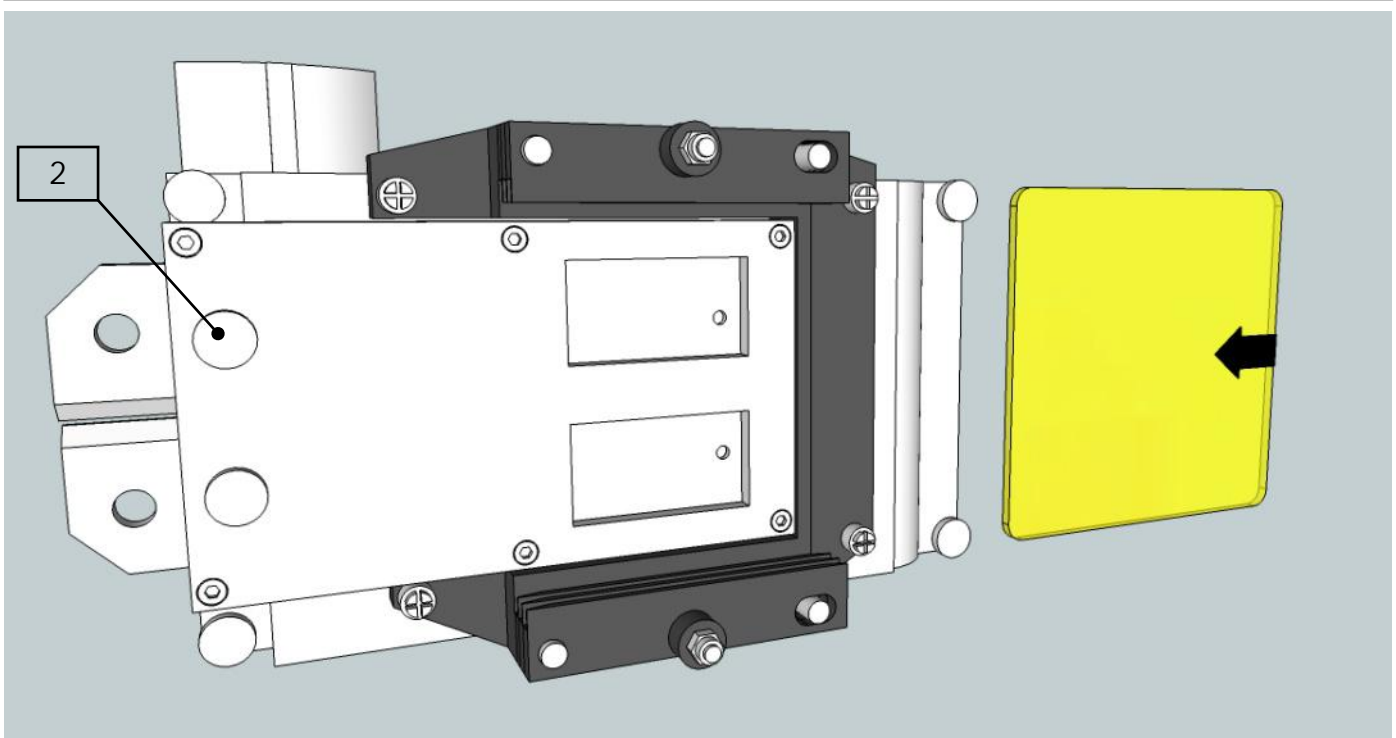

IT
EN
ES
FR

IT
EN
ES
FR

Once the filter holder is fixed, it will be sufficient to slide a filter into the elastic seats until it covers all pinholes on the camera. The system will automatically lock the filter without having to secure it with screws, magnets or other devices. Likewise, to remove the filter, simply hold it at the ends and slide it out of the elastic seats.

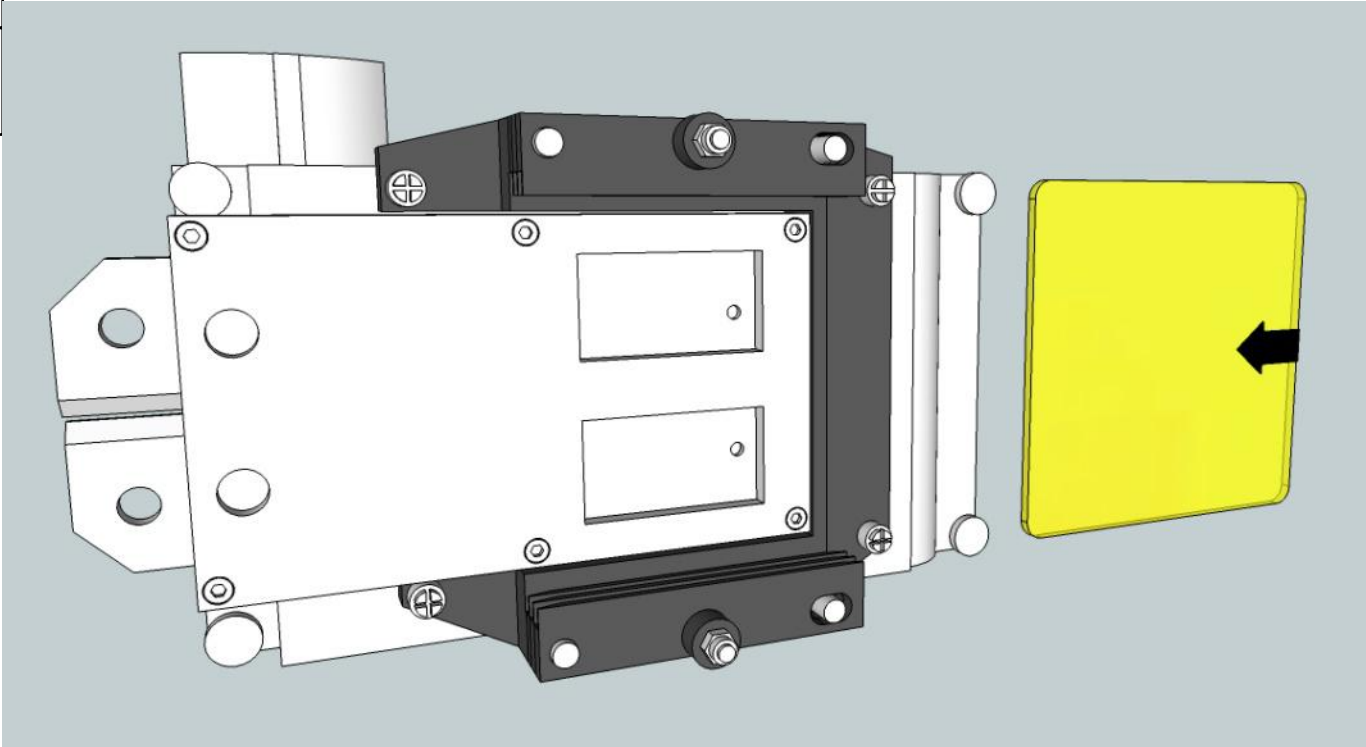


Aulomacolor filter holders have the capability to hold up to three filters at the same time, so it will be possible to combine different filters to compose the desired photographic effect.

Elastic seat preload

The strength applied on elastic seats is procured by two bolts 3 that preload the system. The preload is calibrated in our shop to have a perfect insertion of our filters Aulomacolor-L. In case you want install another kind of filters and in this case the elastic seats result to much tight or released during the filter insertion, it is possible tight or release the bolts 3 to increase or reduce the strength applied on elastic seats.

Caution:

An excessive strength could procure scratches in the filter edges.

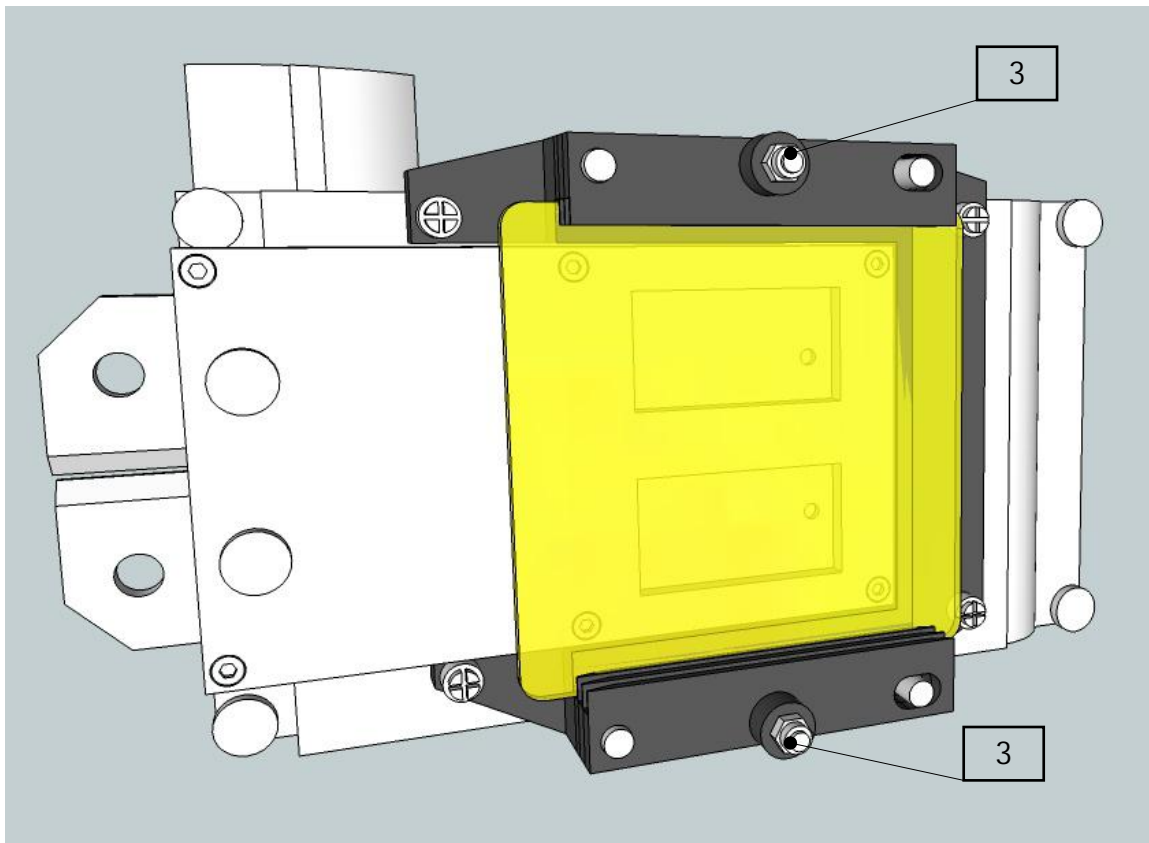

IT
EN
ES
FR

Warning:

Aulomacolor filter holder 6x12-L is developed to install Aulomacolor filter L, we reject any liability in case of damages procured by our filter holder on other brands filters.

Suggestion:

Aulomacolor filter holder 6x12-L after the installation on the camera might be not removed. The camera can take photos without filters but with filter holder installed in the camera without problems of vignetting. To avoid any damages on camera caused by frequently filter holder installation, we suggest the filter holder removing only if is necessary.

Note:

Aulomacolor filter holder 6x12-L surfaces are in part wrapped with a vinyl film, this material applied on poliurethane resin produce sometimes small bubbles in the surface. This isn't a defect of the filter holder and don't reduces its efficiency.

IT
EN
ES
FR

Maintenance and cleaning

1. Before install the filter holder use a pump with dust filter to clean the camera and filter holder
2. Clean the filter holder with a soft, clean cloth, preferably a dust-capturing cloth.


Specifications

1. Overall dimansions (HxWxD): 128x125x52mm (5-3/64"x4-59/64"x2-3/64")
2. Weight: 160g (5.64Oz)
3. Material: composite resin, PETG, brass and inox steel
4. Working temperature without film: min -30° C.....max 60° C
5. Storage temperature: min -40° C max 70° C

Storage

Store the filter holder in an environment with a temperature within the range indicated for storage. The manufacturing material makes it resistant to humid environments, however, it is recommended to store it in a dry environment to avoid possible oxidation of metal components.

Disposal of the filter holder

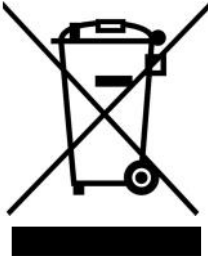

Under no circumstance should you dispose of the filter holder in normal domestic waste. Dispose of the filter holder via an approved disposal company of your municipal waste facility. Please observe currently applicable regulations. Please contact your waste disposal center if you need any further information. The following is a list of the materials that compose the camera for ease of disposal:

- Polyurethane resin with iron oxid additive.
- Brass
- Steel
- PETG

Disposal of instructions manual



The instruction manual enclosed in the package is printed on paper and can be disposed of at your recycling plant.

Disposal of packaging



The packaging is made of recyclable material and can be disposed of at your recycling plant.

Intended use

The Filter holder 6x12-L is used for install fotografic filters on our pinhole camera Auloma Panorama 6x12. Do not use the filter holder for other purposes, Auloma Holding is not liable for damage caused by improper use of the product.

Customer service

To ensure speedy handling of your issue, please email us for assistance

Email: info@auloma.com

Social community

Owning an Auloma pinhole camera allows you to share your experiences and emotions obtained using this product also through dedicated social platforms. If you are interested in sharing your photos with other photography enthusiasts, publish your photos on the dedicated flickr space:

<https://www.flickr.com/groups/auloma/>,

Or share your photos on the web using #auloma tag

<https://www.auloma.com>

<https://attaphoto.com>

<https://twitter.com/aulomaholding>

<https://www.facebook.com/auloma.pinhole/>

<https://www.instagram.com/aulomaholding/>

IT

EN

ES

FR